c3controls P.O. Box 496 BEAVER, PA 15009


PH: 724-775-7926 FAX: 724-775-5283 www.c3controls.com e-mail: info@c3controls.com

Mounting Instruction for Alarm Contact

(Cat.No. 1100 - STA211)




For Installing Alarm Contact

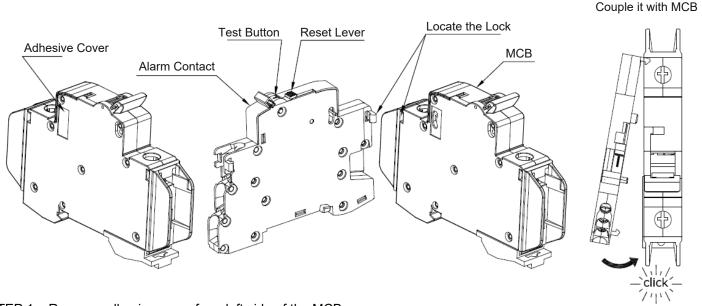

- STEP 1 Remove adhesive cover from left side of the MCB.
- STEP 2 Locate the snap while also ensuring both the MCB and Auxiliary are in the "OFF" position.
- STEP 3 Lock the Alarm contact to left side of the MCB firmly.
- STEP 4 Test button is used to verify NO/NC contact operation without turning circuit breaker ON. Simply, press the Test button and that will trip the Reset lever and switch the contact state.
- STEP 5 To reset Alarm contact after Circuit Breaker is tripped, move the Reset lever in upward direction before turning MCB ON.

For Uninstalling Alarm Contact

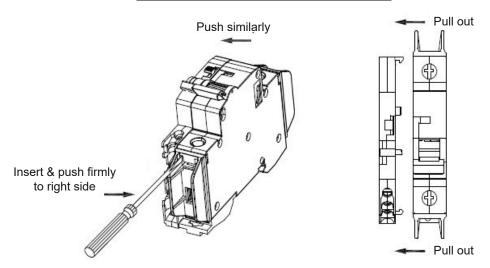

- STEP 1 Insert the screw driver in the location as shown in the fig.
- STEP 2 Push the screw driver to the right so that Alarm contact detaches from MCB.
- STEP 3 Similarly do the same procedure to the opposite side.
- STEP 4 Gently pull out the Alarm contact from the MCB.



