


## Mounting Instructions for Miniature Circuit Breaker Lock-Off Attachment

(Cat. No. 1100-LO1)

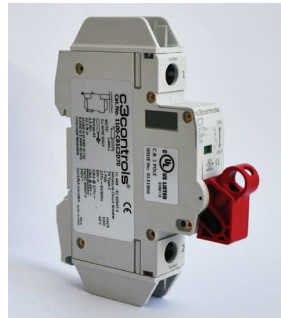


Breaker with Lock-off




### STEP - 1

Move the breaker handle in the desired (Off) position.

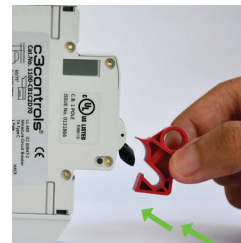


### STEP - 2

Hold the Lock-off as shown.

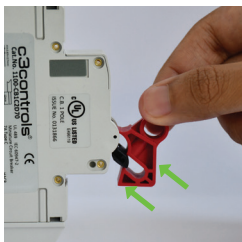

### STEP - 3

Position the Lock-off directly over the breaker handle by guiding the upper flange and lower wedge of the Lock-off as shown.

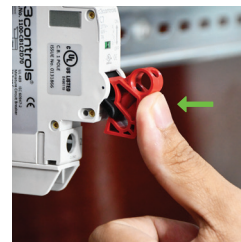

### STEP - 4

Using your thumb, push the Lock-off so it snaps into place.



### STEP - 5

When correctly installed, the lower wedge of the Lock-off will fit at the base of the breaker handle.



### STEP - 6

Use an allen key (1/16 inch) to tighten the screw in the Lock-off.

Note: We strongly advise the use of a padlock for complete security. To remove the Lock-off, loosen the screw and remove in the opposite way and direction as it was installed.