

## Mounting Instruction for Lock-Off Attachment

(Cat. No. 1100 - LO1)




Breaker with Lock-off




### STEP - 1

Move MCB handle in desired (Off) position. Find the groove and holes on either side, in line with that groove.

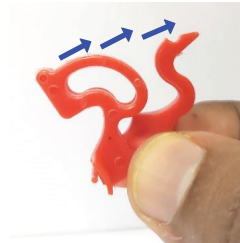


### STEP - 2

Pull out the center lever of Lock-off attachment.

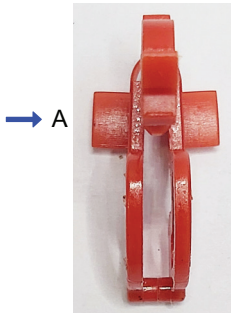


### STEP - 3

Squeeze sides A and B together.

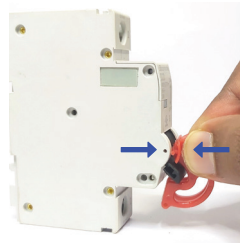

### STEP - 4

Insert both the pins of Lock-off attachment in identified holes in breaker.

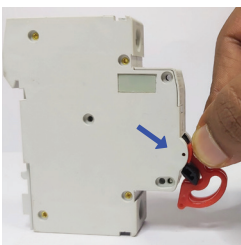

### STEP - 5

When correctly installed, Lock-off attachment should sit flush on either side as shown.



### STEP - 6

When pins are installed, push the center lever in until it is locked into place.

Note: The Lock-off attachment can be used to lock the MCB either in "ON" or "OFF" position. We strongly advise the use of padlock for complete security. To remove the Lock-off, pull the center lever out and gently remove the pins from MCB holes.