
c3controls
P.O. Box 496
BEAVER, PA 15009
PH: 724-775-7926
FAX: 724-775-5283
www.c3controls.com
e-mail:
info@c3controls.com

Mounting Instruction for Alarm Contact

(Cat.No. 1100 - STA211)


series 1100

For Installing Alarm Contact

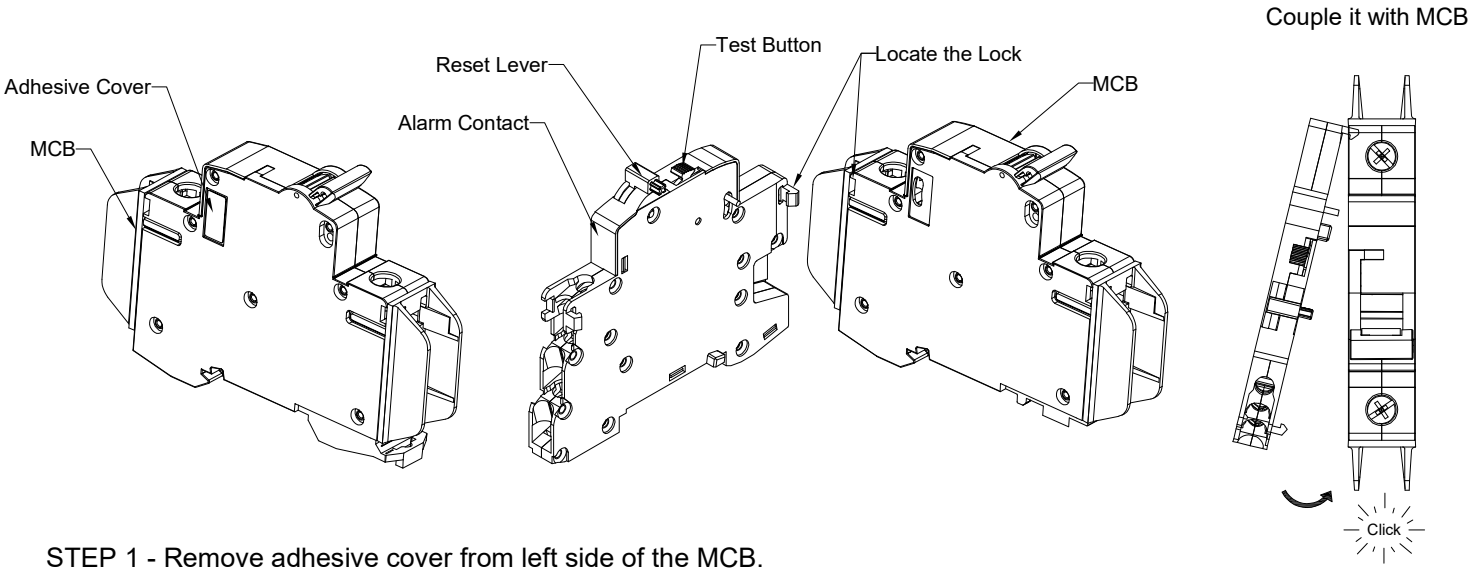

STEP 1 - Remove adhesive cover from left side of the MCB.
STEP 2 - Locate the snap while also ensuring both the MCB and Auxiliary are in the “OFF” position.
STEP 3 - Lock the Alarm contact to left side of the MCB firmly.
STEP 4 - Test button is used to verify NO/NC contact operation without turning circuit breaker ON.
Simply, press the Test button and that will trip the Reset lever and switch the contact state.
STEP 5 - To reset Alarm contact after Circuit Breaker is tripped, move the Reset lever in upward direction before turning MCB ON.

For Uninstalling Alarm Contact

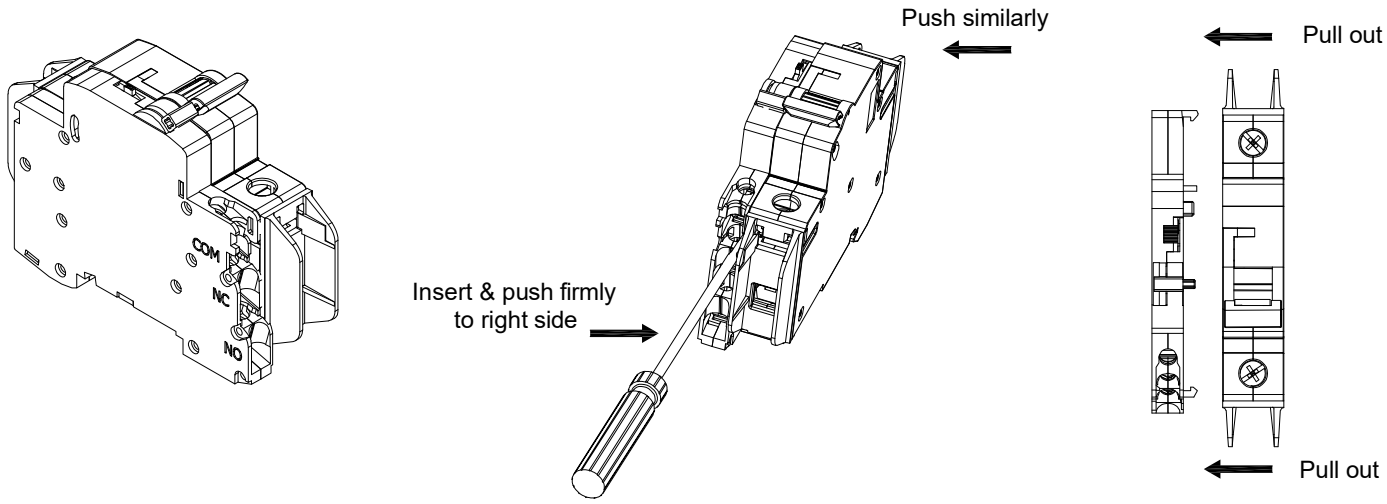

STEP 1 - Insert the screw driver in the location as shown in the fig.
STEP 2 - Push the screw driver to the right so that Alarm contact detaches from MCB.
STEP 3 - Similarly do the same procedure to the opposite side.
STEP 4 - Gently pull out the Alarm contact from the MCB.