c3controls
P.O. Box 496
BEAVER, PA 15009
PH: 724-775-7926
FAX: 724-775-5283
www.c3controls.com
e-mail:
info@c3controls.com

Mounting Instruction for Auxiliary Contact

(Cat.No. 1100 - SA211)

series 1100

For Installing Auxiliary Contact

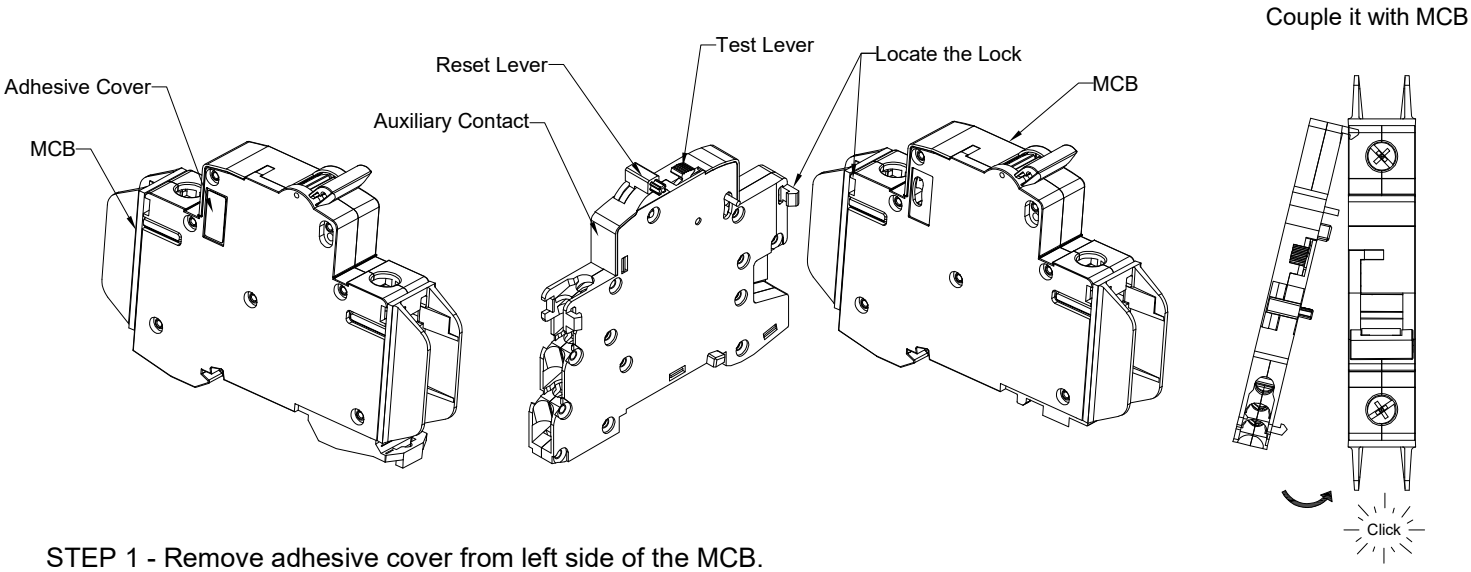

STEP 1 - Remove adhesive cover from left side of the MCB.
STEP 2 - Locate the snap while also ensuring both the MCB and Auxiliary are in the “OFF” position.
STEP 3 - Lock the Auxiliary contact to left side of the MCB firmly.
STEP 4 - The Test lever allows testing NO/NC contanct switching without turning the circuit breaker ON.
Simply slide the test lever in upward direction and contancts will change their state.

For Uninstalling Auxiliary Contact

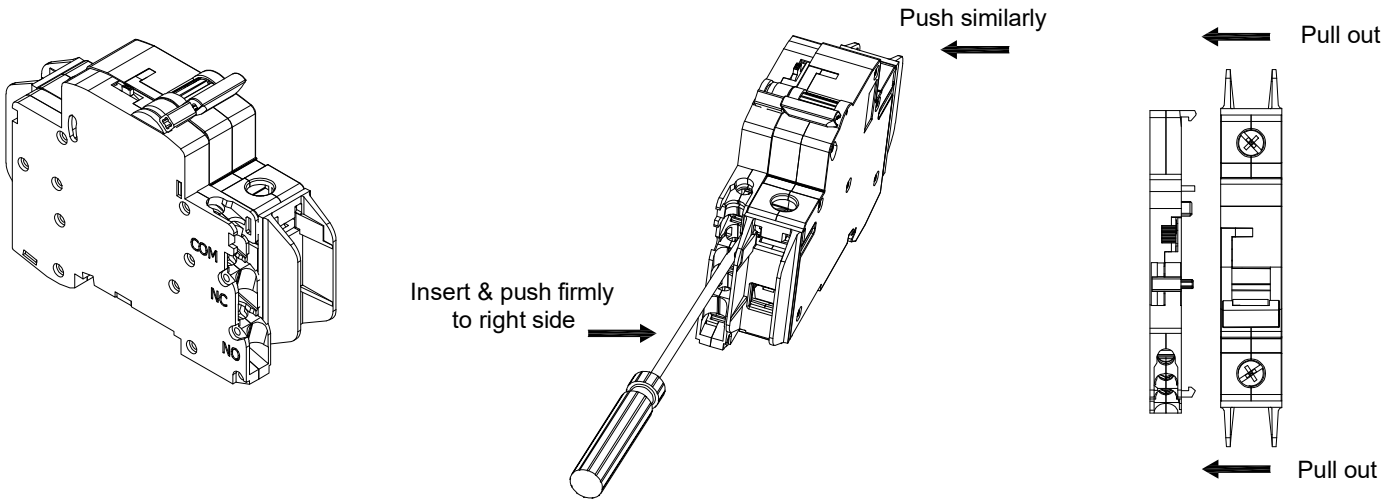

STEP 1 - Insert the screw driver in the location as shown in the fig.
STEP 2 - Push the screw driver to the right so that Auxiliary contact detaches from MCB.
STEP 3 - Similarly do the same procedure to the opposite side.
STEP 4 - Gently pull out the Auxiliary contact from the MCB.