



# MINIATURE CIRCUIT BREAKERS Installation Instructions





# PRODUCT OVERALL DIMENSIONS




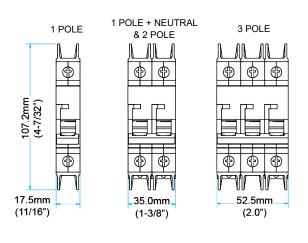


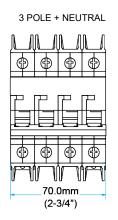

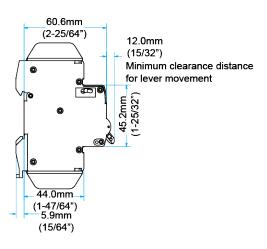


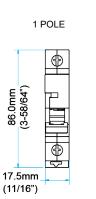


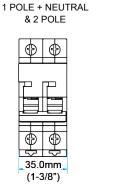

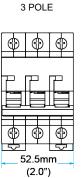




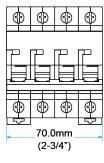

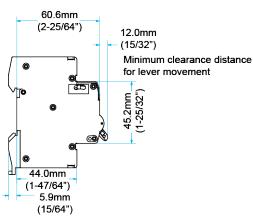


### DC MCB WIRING CONFIGURATION

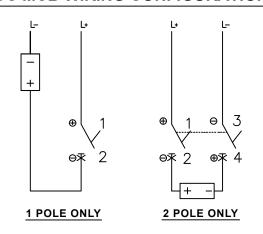


Poles		1	1+N	2	3	3+N
Short Cir	cuit	Current	Protecti	on		
Electrical UL/CSA APPLICATIONS						
Conformity to Standards		UL 489, CSA C22.2 No. 5/ UL 1077, CSA C22.2 No. 235				
AC Rated Operating Voltage	V	277		480Y/277		
DC Rated Operating Voltage	V	48		00		
(wired in series)	°			96	_	_
MAXIMUM SHORT CIRCUIT RATING						
@120 VAC	kA	10				
@240 VAC	kA	10				
@277 VAC	kA	10				
@480Y/277 VAC	kA	10				
@48 VDC	kA	10	10	10	_	_
@96 VDC (wired in series)	kA	_	_	10	-	_
Electrical IEC APPLICATIONS						
Conformity to Standards		IEC 60947-2, IEC 60898				
ULITMATE SHORT CIRCUIT						
BREAKING CAPACITY (Ics)						
@240 VAC	kA	15				
@415 VAC	kA	15				
RATED SERVICE SHORT CIRCUIT						
BREAKING CAPACITY(Ics)						
@240 VAC	kA	10				
@415 VAC	kA	10				
Constr	uctio	n Speci	fications	5		
Wire Size		#18-#3 AWG / 0.82mm² - 26.70mm²				
Terminal Torque		2.5 N-M / 22.2 lb-in				
Terminal Guard		IP20				
Operating Temperature		-25 to 55°C				


## TRIP CHARACTERISTICS

### **UL 489 Branch Circuit Breakers (1100-CB)**

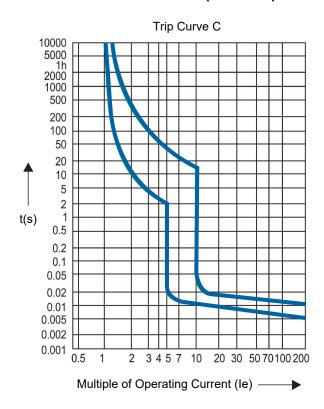

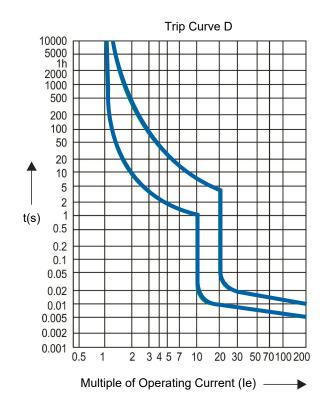


### **UL 1077 Supplementary Protectors (1100-SP)**

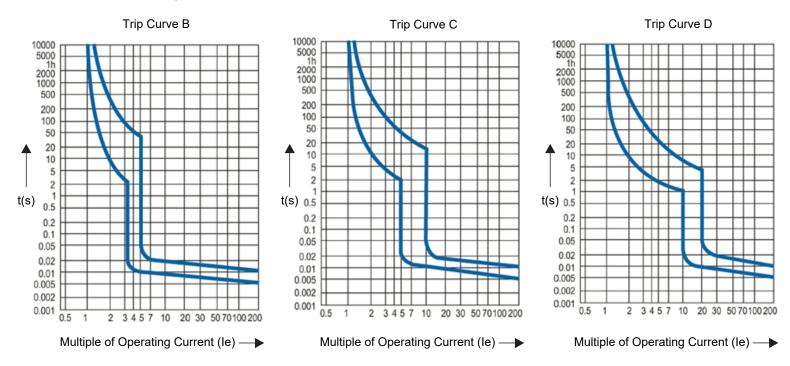

# **MOUNTING INSTRUCTIONS**


Snaps on 35mm DIN rail

### How to Install?

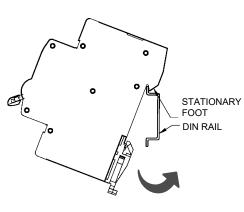


Latch stationary foot onto din rail, then rotate the circuit breaker until the bottom clip snaps into place.

### **How to Uninstall?**

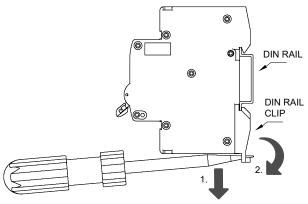


- 1. Insert the screwdriver in DIN rail clip slot of breaker and pull it downwards.
- 2. Move the breaker away in order to disengage it from DIN rail as shown above.

### **MOUNTING POSITION**

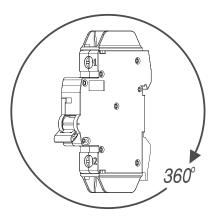


**UL 489 CBs** 

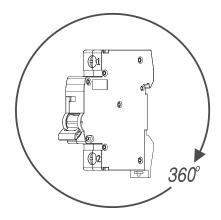


**UL 1077 SPs** 

# TRIP INDICATION

Apart from handle movement, breaker status is clearly indicated via the color-coded status window. Green flag indicates open/ tripped breaker and Red is an indication of flowing current.

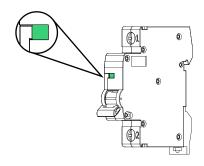

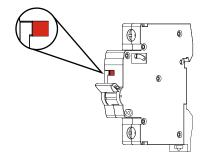



### **WARNING**

- Disconnect power before proceeding with any work on this equipment.
- Installation and maintenance by technical personnel only.
- Install products in accordance with the operation instructions and the NEC (U.S. National Electrical Code) regulations or local applicable codes and standards.



